


Soft Starter Control Panel
 Lockable NEMA 1 V2 Enclosure
 Red Pilot Light
 120V controls
 Individual Motor Overload Protection
 Keyed On/Off Switch-Key removable in both positions
 Photo Sensor w 5' of lead to be field wired to control panel

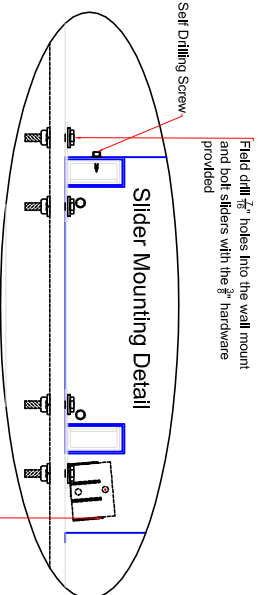

Adjust the diffuser 5 degrees towards the exterior of the building. Confirm diffuser adjustment after power has been supplied to the Air Barrier. See owners manual.

CSA & CWB CERTIFIED

ENERSHIELD INDUSTRIES LTD
 16821-113 AVENUE
 EDMONTON, ALBERTA T5M 2X2
 PH (780) 482-4662 FAX (780) 482-4074
 E-mail: info@enershield.ca
 www.enershield.ca

DURASHIELD-HD		AIR BARRIER	
Voltage 208V/3/60Hz	Voltage 460V/3/60Hz	Voltage 575V/3/60Hz	Blowers
Motor(s) 2 @ 5 Hp, 1800 RPM, TEFC, IP55, VFD Compatible FLA 28.8	Motor(s) 2 @ 5 Hp, 1800 RPM, TEFC, IP55, VFD Compatible FLA 13	Motor(s) 2 @ 5 Hp, 1800 RPM, TEFC, IP55, VFD Compatible FLA 10.4	6

DURASHIELD-HD		DSH-144
Air Velocity (fpm) (m/s)	5500/27.9	
Air Volume (cfm) (l/s)	19350/9132	
Total hp/watts	10 hp/7460W	
Weight lbs/kg	812 lbs/370 Kg	